


mee-go[®]

COCOON

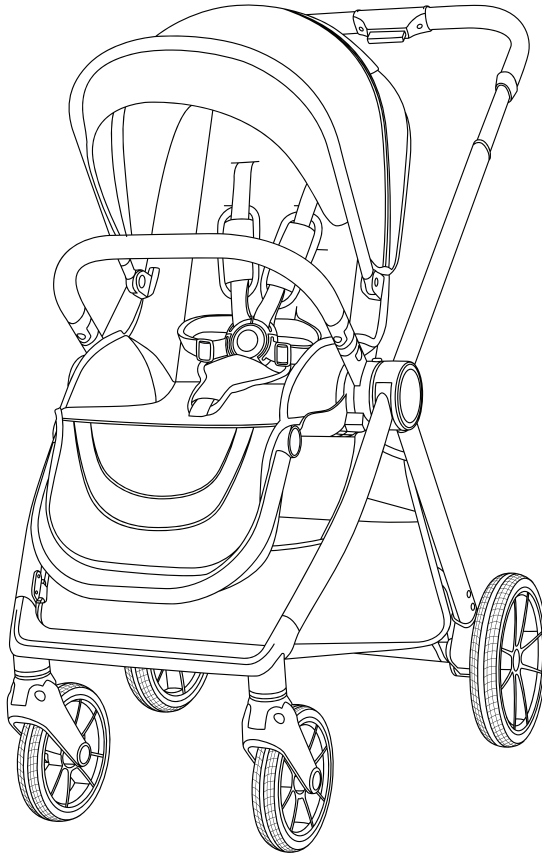

Dear Customer,

Thank you for purchasing the Cocoon Stroller.

For the safety of you child, you must read and follow these instructions carefully. This stroller is suitable up to maximum child's weight of 22kg or 4 years old, whichever comes first.


This product meets the following standards EN1888-1:2018+A1:2022, Mee-go Ltd. do reserve the right to improve the product and make further developments to enhance the experience.

IMPORTANT- READ CAREFULLY AND KEEP FOR FUTURE REFERENCE


WARNING:

- Never leave your child unattended while using this stroller.
- Ensure that all the locking devices are engaged before use.
- To avoid injury ensure that your child is kept away when unfolding and folding this product.
- Do not let your child play with this product.
- Always use the restraint system.
- Check that the carrycot or seat unit attachment devices are correctly engaged before use.
- This product is not suitable for running or skating.
- Lock the brake when you place your child into the stroller and lock again when you remove your child.
- Regularly check if there's any visible damage to the handle & base unit.
- In stroller mode the seat unit is suitable up to a maximum child's weight of 22kg or 4 years old, whichever comes first.
- When using the carrycot (purchased separately), the carrycot is suitable for a baby from 0 to 6 months up to a maximum weight of 9kg.
- Do not use more than 1 mattress in the carrycot. Do not use a mattress thicker than 20mm.
- The carrycot is only suitable for a child who cannot sit up unaided, cannot roll over and cannot push itself up to its hands and knees.
- Maximum weight of the child using the carrycot is 9kg.
- The maximum loading for the storage basket is 5kg.
- This stroller chassis is designed and tested to be used with the carrycot or the seat unit.
- Any additional load attached to the handle and/or on the back of the backrest and/or on the sides of the stroller will affect its stability.
- Do not carry more than one child in this stroller.
- Do not use extra accessories not intended for the stroller and only use replacement parts supplied & approved by the manufacturer.
- This stroller does not replace a cot or a bed.
- Never use this stroller on a stand or platform.
- Use only on firm, horizontal, level and dry surfaces.
- Do not let other children play unattended near the stroller.
- Do not use, if any part of the stroller is broken, torn or missing.
- Do not place the stroller near an open fire or other source of strong heat


Contents included in the box

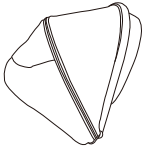

Canopy

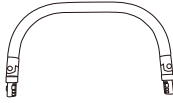


Bumper Bar

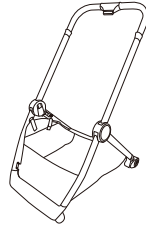

Frame




Front wheel x 2

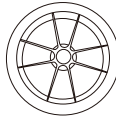

Rear wheel x 2




Seat unit






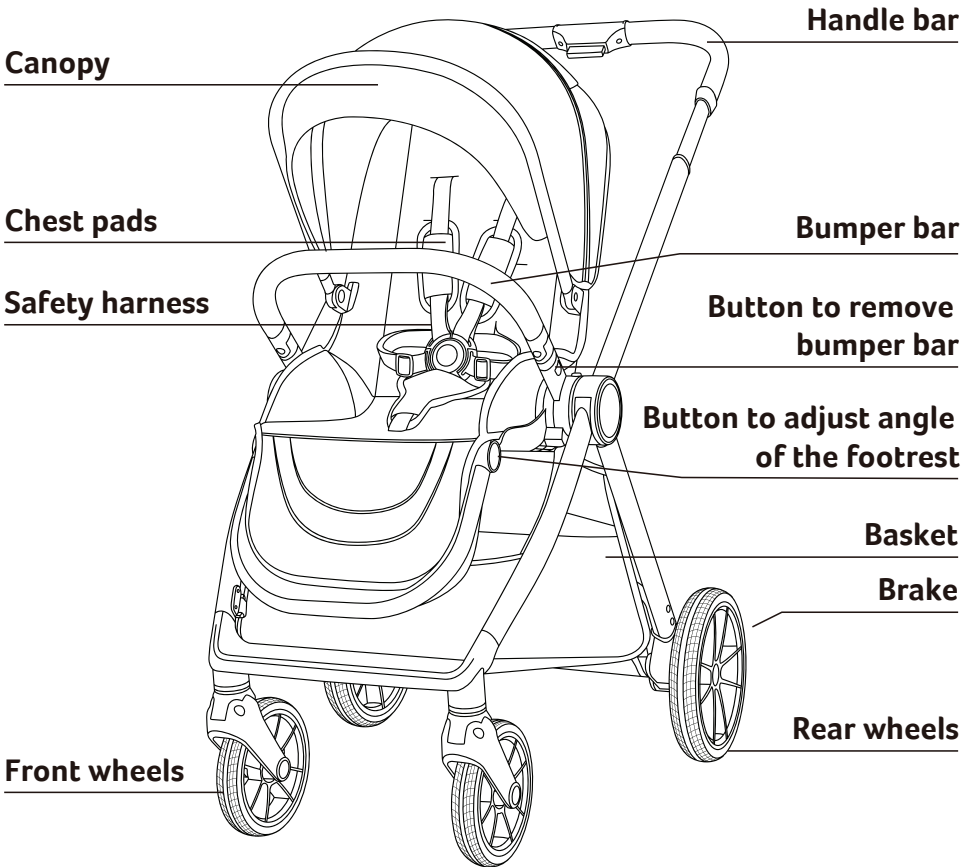


Assembling the stroller

Assembling the wheels:

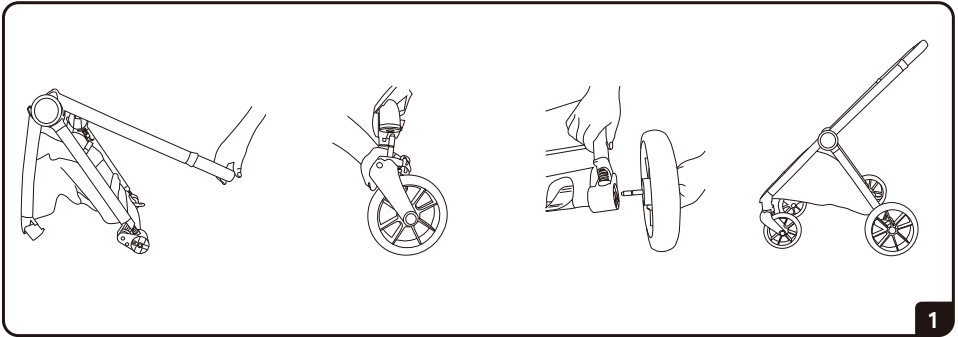

1. Unfold the frame fully and fix the wheels as illustrated.

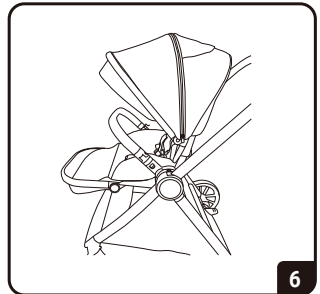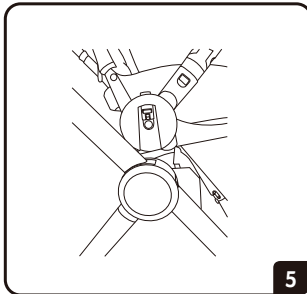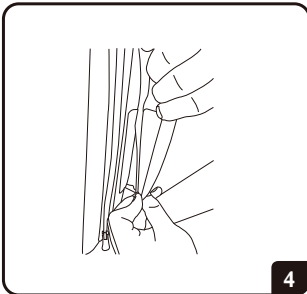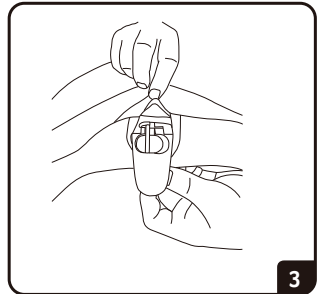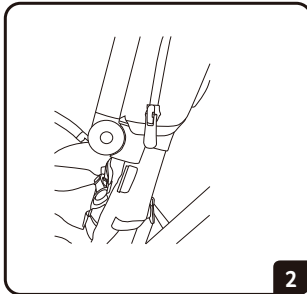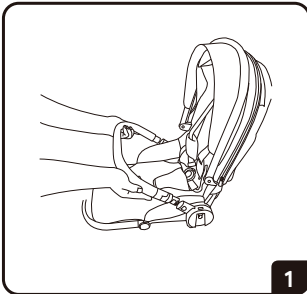


Seat Unit and Hood/Canopy assembly:


1. Assemble the front bumper bar as shown in fig1. until you hear a 'click'
2. Insert the canopy on both sides of the seat unit shown in fig 2.
3. Ensure the backrest adjustment buckle is correctly placed through the hole of the canopy so the recline can be operated freely see fig 3.
4. Attach the Velcro on both sides of the canopy as shown in fig 4.
5. Insert the seat unit to the frame as shown in figure 5 until you hear a "click" sound which confirms the attachment to the frame.
6. The assembled seat and canopy.

Features and benefits



Adjusting the handlebar:

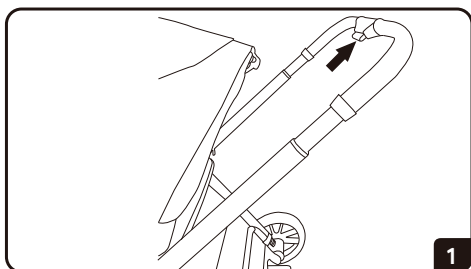

Adjusting the footrest:

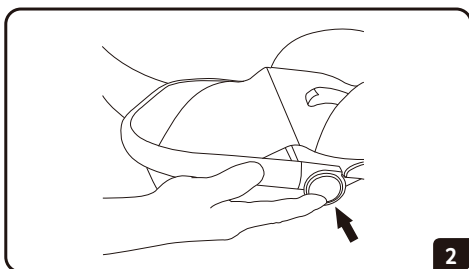




1. To adjust the height of the handle bar, press the button in, located in the centre the top handle & pull the handle to the desired height .
2. The footrest can be adjusted by pushing in the buttons on both sides of the footrest simultaneously and rotating to desired position.

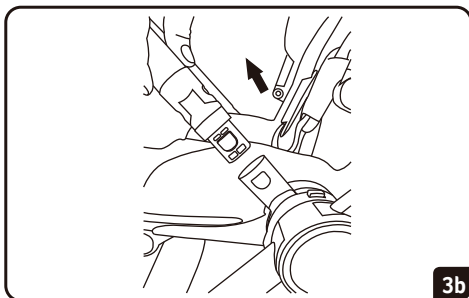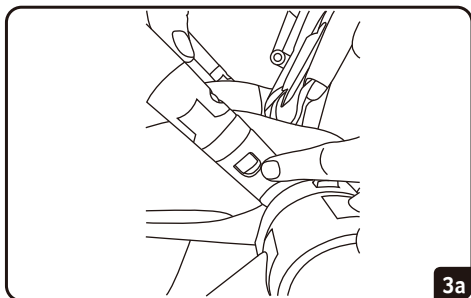

Removing the bumper bar:

3. To detach the front bumper bar or gate for easy access to the stroller seat unit, first press the button to release the bumper bar (3a) then pull upwards to remove (3b).



Removing the seat unit:

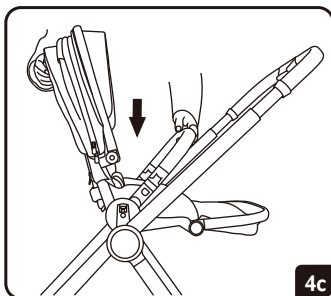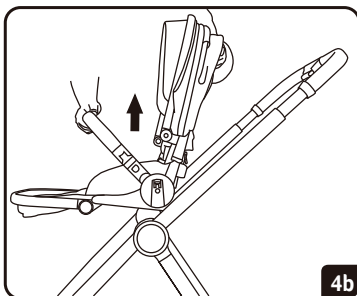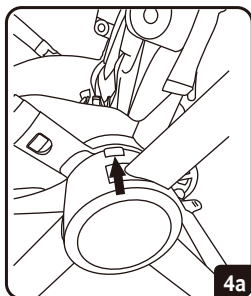

4. To remove the seat unit, first press the memory lock button on both sides simultaneously (4a). Lift up to remove (4b). If you wish to change direction of the seat unit rotate and replace in position (4c).




Features on the Cocoon Chassis

Using the brake:

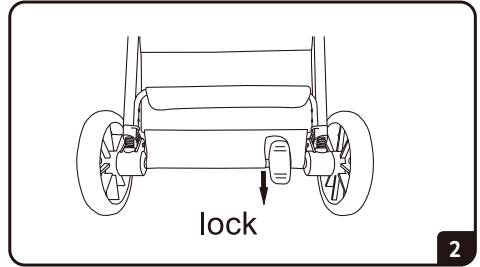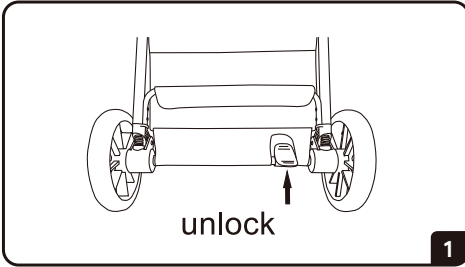




1. Push the brake upwards to unlock the braking system on the stroller.
2. Push the brake downwards to lock the braking system.

Removing the wheels and changing the front wheel orientation:

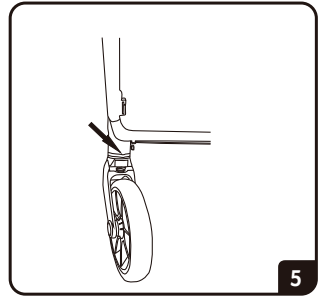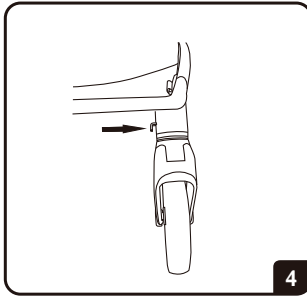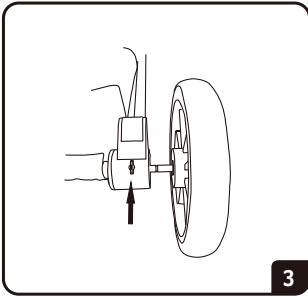







3. Press the button to remove rear wheel as shown in figure 3.
4. Press the button to remove front wheel as shown in figure 4.
5. Press the button to lock & unlock direction of front wheels see fig 5.

Adjusting the 5 point safety harness:

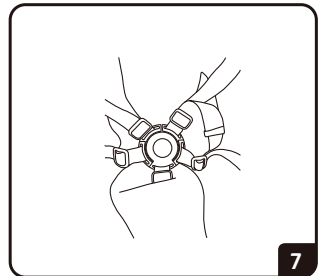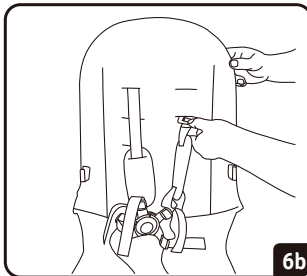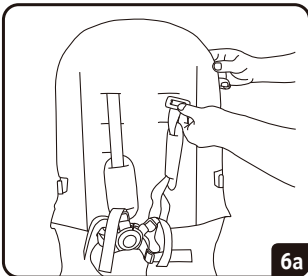

6. To ensure a safe & comfortable fit, the shoulder straps of the harness should be positioned at or just below your child's shoulders. Should you need to adjust the shoulder harness straps. Please remove the harness clip (6a) and then insert it into another position as shown (6b).
7. For safety, the child should use the 5 point safety harness at all times when in the seat, please ensure it is being used correctly (7).




Adjustable Harness and using the super safe magnetic buckle.

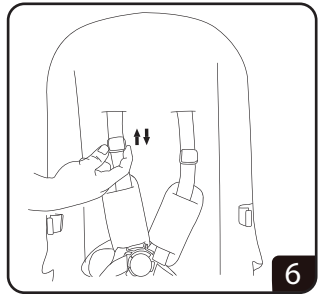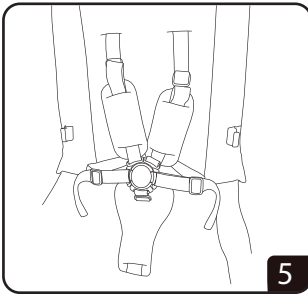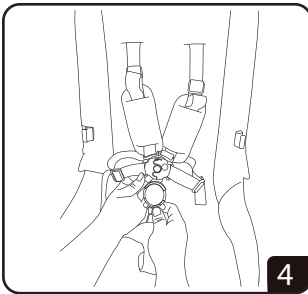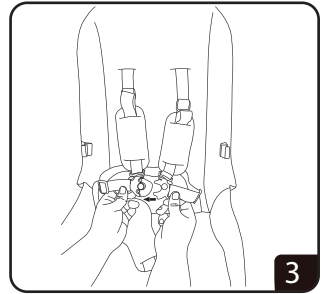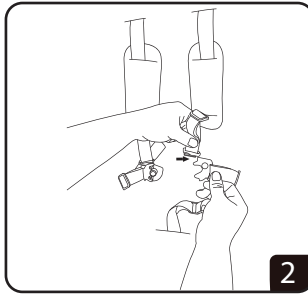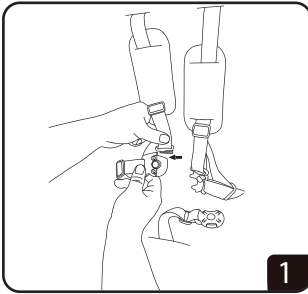


1. Slide shoulder harness into the waist harness as shown.
2. Repeat the process on the other shoulder strap as illustrated.
3. Connect both parts of the waist Harnesses together as one piece.
4. The magnetic buckle is attached to the crotch pad and align this over the waist harness, and it will attach magnetically.
5. Now the harness is fully connected. To release press the buttons on both sides of the buckle and lift away from the buckle.
6. Adjusting the harness easily slide down the adjustable plastic part up and down the webbing to easily adjust the size and length of the harness as the child grows.

Seat fabrics assembly & adjusting the backrest

Assembling the seat fabrics:

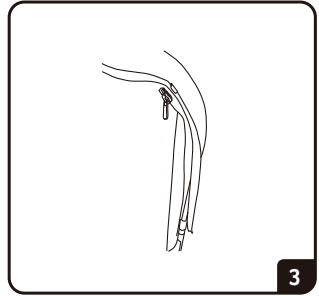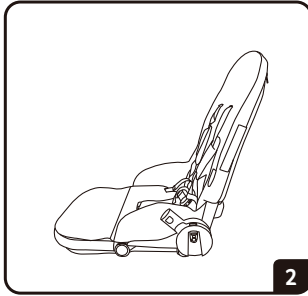
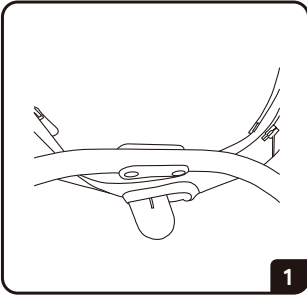


1. First pass the backrest button through the hole located at the back of the seat unit as shown in figure 1.
2. Then put it onto the seat frame as shown in figure 2.
3. Zip both sides of the zippers at back of the seat unit as shown in fig 3.

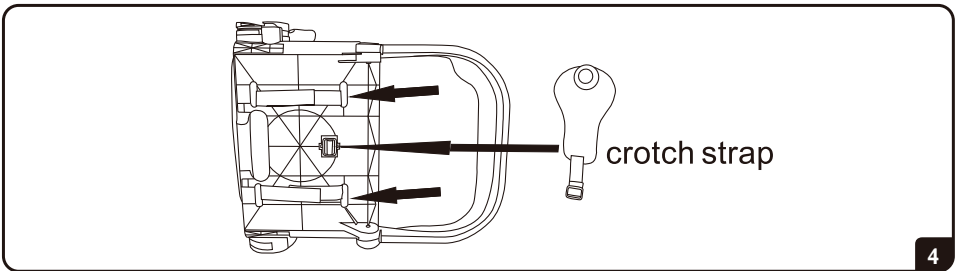

4. Connect the Velcro located under the seat unit see figure 4. Finally remember to assemble the padded fabric crotch strap.






Adjusting the Backrest:

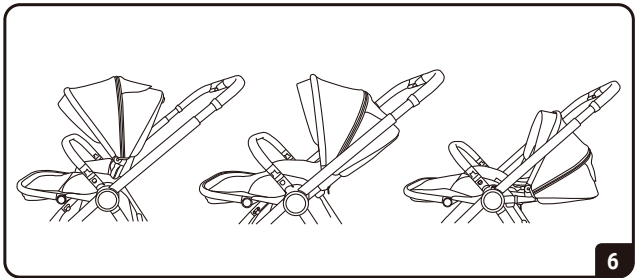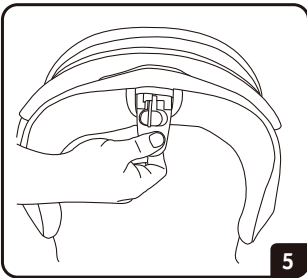

5. Pull the backrest adjustment button upwards to adjust the multi-positional backrest angle. Please do not push secondary lock button during this operation.
6. Adjust to the desired angle.




Folding & Unfolding the stroller

Folding the stroller in World Facing position:

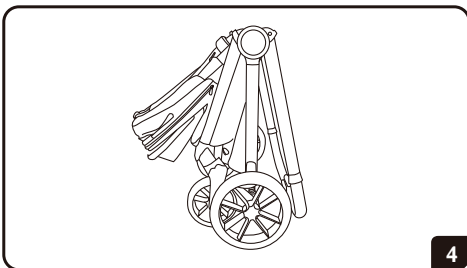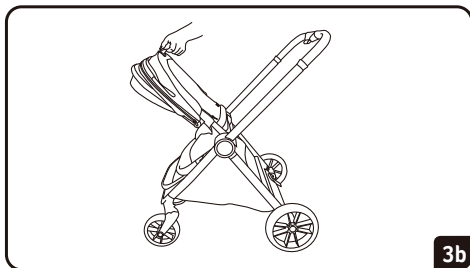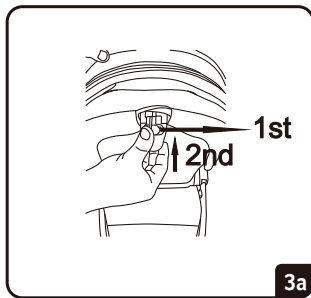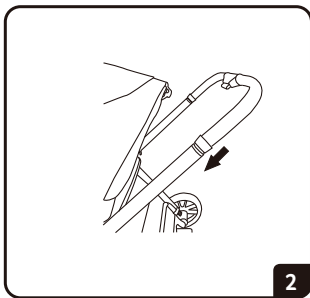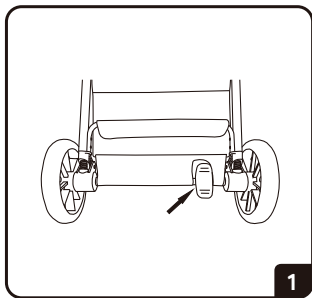

1. Place the brake on the baby stroller as shown in figure 1.
2. Then place the handle in its lowest position as shown in fig 2.
3. First, push the secondary lock to the right by sliding this across. Then pull the backrest adjustment button upwards as shown in figure 3a and further illustrated in figure 4, the stroller will now auto fold.
4. The stroller shown in the folded position.


Unfolding the stroller in World Facing position:

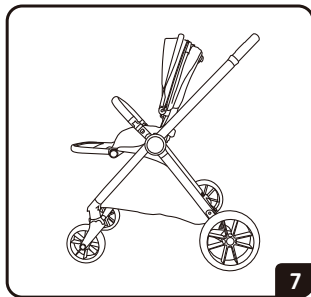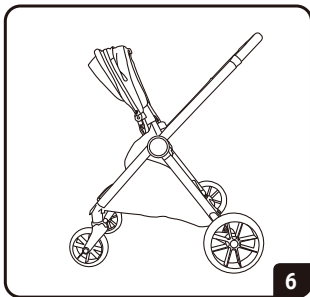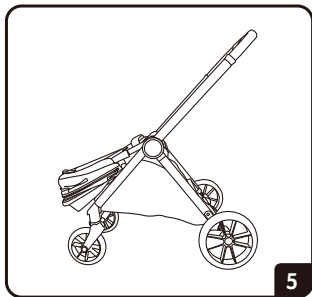

5. First unfold the handle bar as shown in figure 5 until you hear it “click” into place.
6. Next unfold the seat unit as shown in figure 6 until you hear a “click”.
7. Finally, unfold the bumper bar as shown in fig 7 until you hear a “click”.


Folding & Unfolding the stroller

Folding the stroller in Parent Facing position:

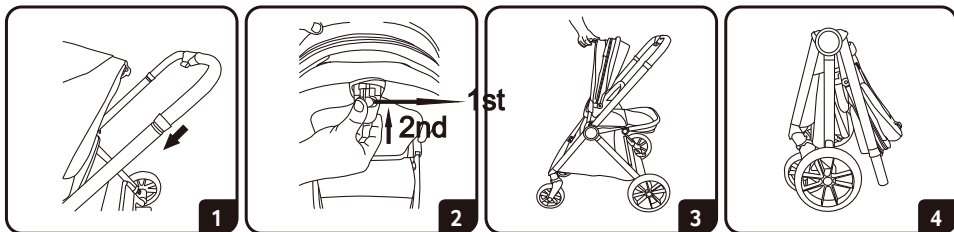


1. Push the handle into the lowest position as shown in figure 1.
2. Then, push the secondary lock to the right hand side and pull the button upwards as shown clearly in Fig 2 and Fig 3.
3. Push the seat forwards and watch the magic happen with the auto folding of the stroller.
4. Stroller shown in the folded position.

Unfolding the Cocoon stroller while in Parent facing position:

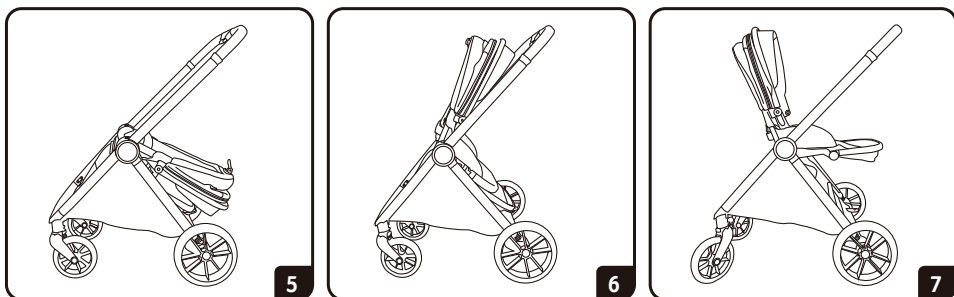

5. Unfold the handlebar of the chassis until it locks into position see Fig 5.
6. Pull the seat unit back into position until it locks on the chassis see Fig 6.
7. Pull the Bumper bar upwards until this locks into position see Fig 7.

Folding the Chassis without the seat unit attached:

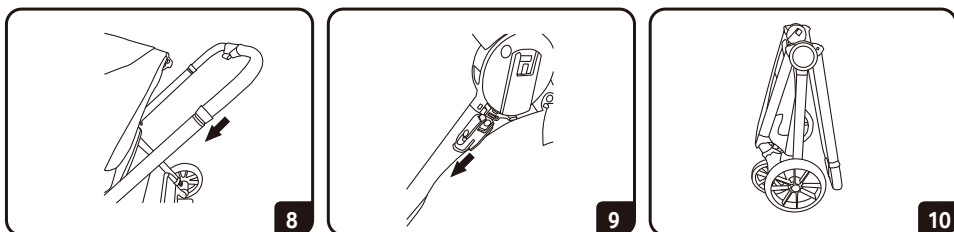

8. Push the handlebar into the lowest positions as shown in Fig 8.
9. Push the buttons as illustrated in fig 8 on the inside of the chassis legs allowing the chassis to autofold into the compact position.
10. Chassis shown in the folded position.

Maintenance instructions

- To ensure your baby is protected from accidental injury, please check and maintain the stroller regularly.
- Please use a cloth or brush to clean the seat fabric and use household soap or neutral detergent to clean other parts.
- Please do not store in direct sunlight and rain.
- Regularly check if there are loose screws, damaged parts or broken stitches, if necessary replace the damaged parts.
- Please use the stroller carefully following the instructions to avoid damage or accidental injury.

Attention!

- Please check all components are installed correctly and fastened in place before each use.
- Do not let the child climb into or out of stroller or stand on the seat or carrycot.
- Do not use the stroller on rough ground, near fire and other dangerous areas.
- Avoid using or storing the stroller in wet, cold or high temperature environments, keeping it away from fire or strong heat.

Mee-go Ltd.
Unit 3A Victoria Mills,
Mill Street East, Dewsbury,
West Yorkshire, WF129AQ
United Kingdom



Contact Mee-go:
t: 01924 485552
info@mee-go.co.uk

www.mee-go.co.uk